

## TOUCH SCREEN CARE



Do not use abrasive cleaners on the Touch screen. For approved cleaning products, contact a Dealer/Authorised Repairer.

## TOUCH SCREEN SETUP

Select **Set-up** from the **Home menu** screen.

The **Set-up** menu screen is divided into categories:

- Screen
- System
- Voice
- Audio

## SCREEN SETTINGS

**Volume pop-up:** Displays the Volume pop-up on/off.

**Screensaver:** Changes the screensaver.

**Time out home:** The sub-menu selection screens can be set to revert to the **Home menu** screen after a predetermined length of time.

**Theme:** Changes the appearance of the Touch screen soft keys.

## SYSTEM SETTINGS

**Button feedback:** Select to turn the soft key confirmation tone on/off.

**Clock adjust:** Select the 12 or 24 hour clock. Set the current time. Select **Date** to change the date, or to alter the date format. Select **Set**, to store the new settings.

**Note:** *The clock can also be adjusted from the Touch screen time display.*

**Home menu shortcuts:** Select up to 2 items from the displayed list to appear as shortcuts on the **Home menu**. Select **Clear** to deselect highlighted items.

**Language:** Select the required language. Select **Male** or **Female** voice. Touch **Change** to select alternatives for Voice and text displays. Follow the on-screen instructions to confirm.

**Note:** *Some languages are not yet available for both the System display text and Voice control. In this event, it will be necessary to select a separate language for Voice control.*

**Volume presets:** Adjust the volume for the available system's announcements, for example, Parking aid, Phone, Voice, etc.