


# Fluid level checks

## FLUID FILLER LOCATIONS

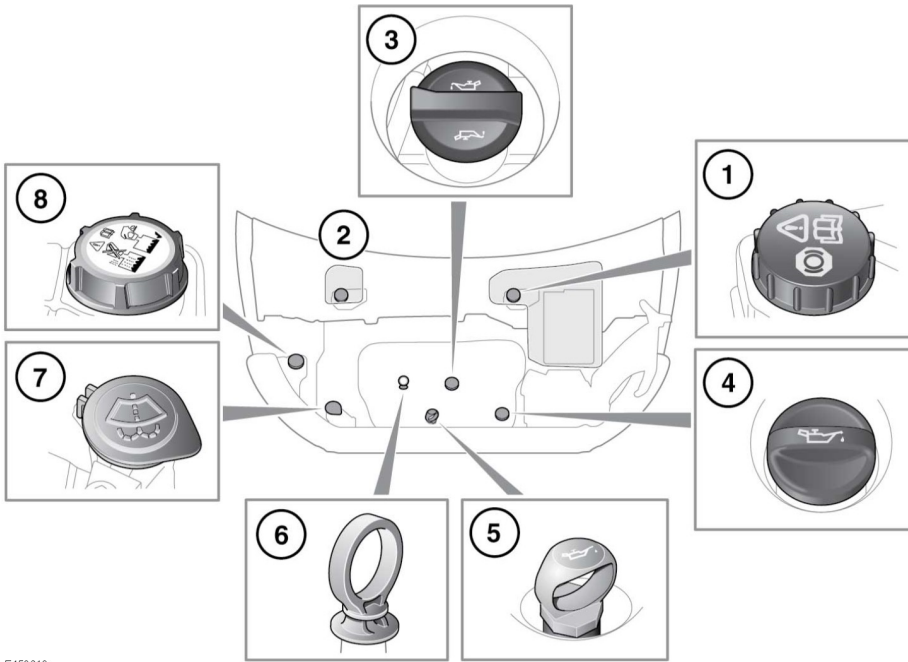

E153613

1. Brake fluid reservoir cap (left hand drive). Remove the left side Under bonnet cover for access. See **199, UNDER BONNET COVERS - REMOVAL**.
2. Brake fluid reservoir cap (right hand drive). Remove the right side Under bonnet cover for access. See **199, UNDER BONNET COVERS - REMOVAL**.
3. Engine oil filler cap (2.0L petrol engine).
4. Engine oil filler cap (2.2L diesel engine).
5. Oil level dipstick (2.2L diesel engine).
6. Oil level dipstick (2.0L petrol engine).
7. Washer fluid reservoir filler cap.
8. Engine coolant reservoir filler cap.



**While working in the engine compartment, always observe the safety precautions. See 197, SAFETY IN THE GARAGE.**



**Do not start the engine, or drive the vehicle, if there is a possibility that any leaked fluid will come into contact with a hot surface, such as the exhaust. Seek qualified assistance immediately.**

## CHECKING THE ENGINE OIL LEVEL



Check the engine oil weekly. If any significant or sudden drop in oil level is noted, seek qualified assistance.



Never allow the oil level to fall below the lower mark or notch on the dipstick.