## Video media player

- Select to pre-stop playback. A second touch will stop and reset the DVD.
- 8. Select to start/restart play.
- Seek down: Select to view the previous DVD chapter or to scroll through video media files.

For information on the CD/DVD loading slot and eject button, and the use of the Audio/Video controls on the audio unit and steering wheel, see 126, AUDIO/VIDEO CONTROLS.

## VIDEO MEDIA INHIBIT WITH VEHICLE MOVING

When the vehicle is moving the video picture will automatically be inhibited. The Touch screen will display the **TV/My video** screen and the relevant safety message will be displayed. If Dual view is fitted, a prompt for the passenger to activate dual view is displayed. See **147**, **DUAL VIEW**.

## **FULL SCREEN VIEW**

When full screen mode is selected, the seek controls operate in the same manner as they do in preview mode.

Use the relevant soft key to select the **4:3**, **16:9** or **Zoom** option to magnify the picture.