

Video media player

7. Select to pre-stop playback. A second touch will stop and reset the DVD.
8. Select to start/restart play.
9. Seek down: Select to view the previous DVD chapter or to scroll through video media files.

For information on the CD/DVD loading slot and eject button, and the use of the Audio/Video controls on the audio unit and steering wheel, see **126, AUDIO/VIDEO CONTROLS**.

VIDEO MEDIA INHIBIT WITH VEHICLE MOVING

When the vehicle is moving the video picture will automatically be inhibited. The Touch screen will display the **TV/My video** screen and the relevant safety message will be displayed. If Dual view is fitted, a prompt for the passenger to activate dual view is displayed. See **147, DUAL VIEW**.

FULL SCREEN VIEW

When full screen mode is selected, the seek controls operate in the same manner as they do in preview mode.

Use the relevant soft key to select the **4:3, 16:9** or **Zoom** option to magnify the picture.