

TIME AND DATE SETTINGS

1. Press the **MENU (2)** button.
2. Select **Clock settings**.
3. Select a clock function.
4. Once the change has been entered, press **OK**.

LANGUAGE SELECTION

To select a display language:

1. Press the **MENU (2)** button.
2. Select **Language**.
3. Once the change has been entered, press **OK**.

DIGITAL (DAB) RADIO

If your vehicle is equipped for digital radio, press the **RADIO (7)** button to select either of 2 groups DAB1 or DAB2. These 2 groups permit the storing of a total of 20 preset stations or 'services' (10 in each group) using the buttons 0-9 on the keypad (5).

DAB radio can significantly increase the number of radio stations available. The DAB signals are transmitted to most major cities, towns and motorway networks.

Unlike AM/FM radio, digital transmits several services on a single frequency. This group of services is known as an ensemble. There may be a number of ensembles receivable in some areas, each typically carrying between 6 and 12 services.

Digital radio is transmitted from regional and local transmitters. Some services are national or regional and are replicated on multiple transmitters throughout the region or country. Other services are local and only available within a limited range of one transmitter.

FINDING DIGITAL SERVICES

Press the seek buttons (**8** or **9**) to search the waveband to find the local active ensembles. Or alternatively the steering wheel seek buttons can perform the same function.

The national channels use the same ensembles throughout a country and so there is usually no need to search for these. If you have stored your favourite national channels already then they will usually be found immediately on the same pre-set buttons.

If reception is lost when the vehicle is in motion, the vehicle may be moving out of range of the ensemble. Use the seek buttons (**8** or **9**) to search for services which are stronger in that area.

***Note:** If any auxiliary electrical equipment is connected to the vehicle, DAB radio reception capability may be reduced.*

SELECTING AND STORING DIGITAL SERVICES

Select **DAB1** or **DAB2**. In each band the active station will be the last one used. To select another station, press the appropriate preset button (0 to 9).

Any preset can be used to store any Digital Radio service, from any ensemble. If you switch between presets which are on different ensembles, the tuning time can take a few seconds (the word '**Searching....**' briefly appears on the screen). Switching between services within the same ensemble is virtually immediate.

If there is no service stored on a preset, or if the service is not receivable at the current location, the message '**No Reception**' will be displayed.