


# Standard audio system overview

## STANDARD AUDIO SYSTEM CONTROLS

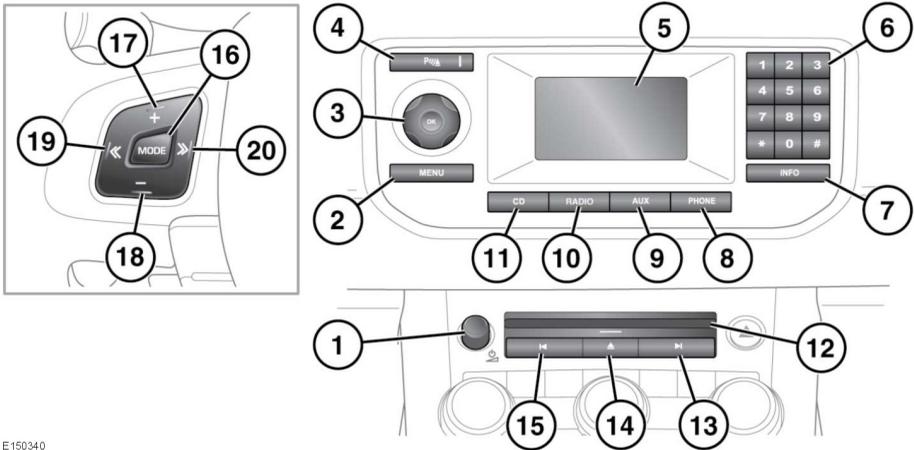

E150340



**Sustained exposure to high sound levels can damage your hearing.**

1. Press to switch on/off.

**Note:** The radio will switch off automatically after approximately 10 minutes if the ignition is turned off.

Rotate to adjust the volume level.

**Note:** The maximum volume level will be restricted if the audio unit is used with the engine switched off.

2. **MENU** button:

- Audio settings
- Clock settings
- Language

3. **OK** and navigation menu control:

Use the navigation control to move to any menu cursor/highlight. When the required option is highlighted, press the **OK** button to select.

4. Parking aid.

5. Audio Information display.

6. Keypad.

7. **INFO**: Traffic/News information.

8. **PHONE** menu.

9. **AUX** input select.

10. **RADIO**: Waveband select (FM, FMAST, AM, AMAST).

When DAB is fitted, select for DAB1 or DAB2.

11. **CD** menu.

12. CD loading slot.

13. Seek up:

- Short press to select the next radio station upward in frequency or to select the next track on chosen audio source.
- Long press to enter radio manual seek mode or to scan forward through a CD track. In radio manual seek mode further short presses will change the frequency in single steps.

14. CD eject button.

15. Seek down: