
Standard audio system overview

STANDARD AUDIO SYSTEM CONTROLS

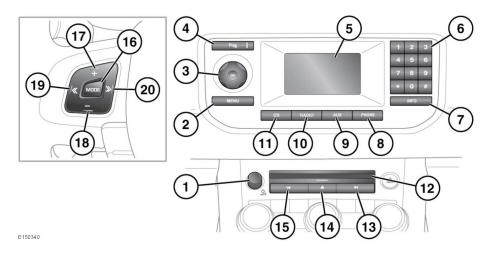

 \triangle

Sustained exposure to high sound levels can damage your hearing.

1. Press to switch on/off.

Note: The radio will switch off automatically after approximately 10 minutes if the ignition is turned off.

Rotate to adjust the volume level.

Note: The maximum volume level will be restricted if the audio unit is used with the engine switched off.

- 2. MENU button:
 - Audio settings
 - Clock settings
 - Language
- 3. **OK** and navigation menu control:

 Use the navigation control to move to any menu cursor/highlight. When the required option is highlighted, press the **OK** button to select.
- 4. Parking aid.
- **5.** Audio Information display.

- 6. Keypad.
- 7. INFO: Traffic/News information.
- 8. PHONE menu.
- 9. AUX input select.
- RADIO: Waveband select (FM, FMAST, AM, AMAST).
 When DAB is fitted, select for DAB1 or
- DAB2. **11. CD** menu.
- 12. CD loading slot.
- **13.** Seek up:
 - Short press to select the next radio station upward in frequency or to select the next track on chosen audio source.
 - Long press to enter radio manual seek mode or to scan forward through a CD track. In radio manual seek mode further short presses will change the frequency in single steps.
- 14. CD eject button.
- 15. Seek down: