Rear media


- 8. Forward/Skip for the selected screen.
- 9. Play/Pause for the selected screen.
- 10. Rewind/Skip for the selected screen.
- **11. Source**: Touch to select the rear media source screen.
- **12.** Media source selection: Touch the required media button.


Note: For DAB Radio select Radio.

13. Source -: Touch to select the required media and return to the Rear media control screen. If required, the selected source can then be controlled via the front screen.

Note: When the main rear media control screen is displayed on the Touch screen, the rear media remote control will be locked out.

REAR MEDIA REMOTE CONTROL

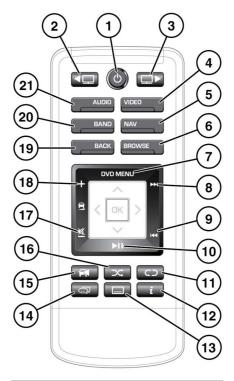

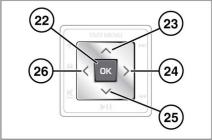

E151273

- Press and release to turn off the screen. Press and hold to turn off the rear media system.
- 2. Left screen select.