



8. Forward/Skip for the selected screen.
9. Play/Pause for the selected screen.
10. Rewind/Skip for the selected screen.
11. **Source:** Touch to select the rear media source screen.
12. Media source selection: Touch the required media button.

Note: For DAB Radio select Radio.

13. **Source -:** Touch to select the required media and return to the **Rear media** control screen. If required, the selected source can then be controlled via the front screen.

Note: When the main rear media control screen is displayed on the Touch screen, the rear media remote control will be locked out.

REAR MEDIA REMOTE CONTROL

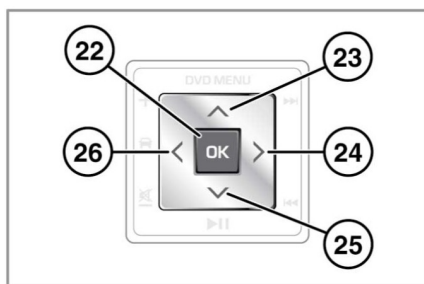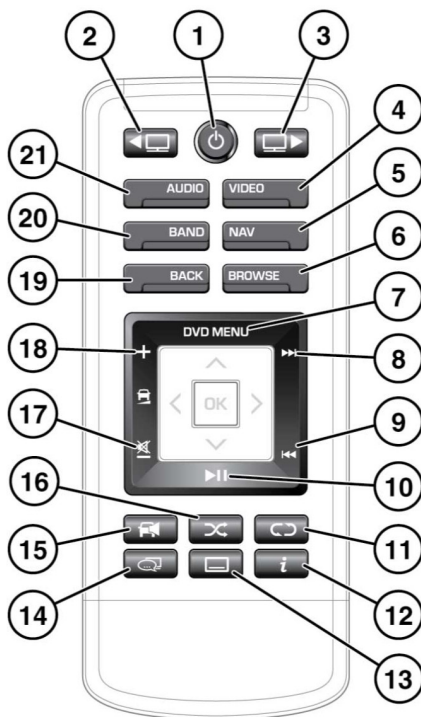

E151273

1. Press and release to turn off the screen. Press and hold to turn off the rear media system.
2. Left screen select.