



8. Forward/Skip for the selected screen.
9. Play/Pause for the selected screen.
10. Rewind/Skip for the selected screen.
11. **Source:** Touch to select the rear media source screen.
12. Media source selection: Touch the required media button.

**Note:** For DAB Radio select Radio.

13. **Source -:** Touch to select the required media and return to the **Rear media** control screen. If required, the selected source can then be controlled via the front screen.

**Note:** When the main rear media control screen is displayed on the Touch screen, the rear media remote control will be locked out.

### REAR MEDIA REMOTE CONTROL

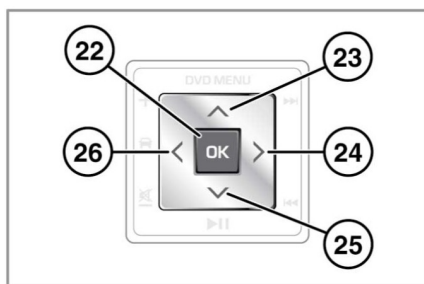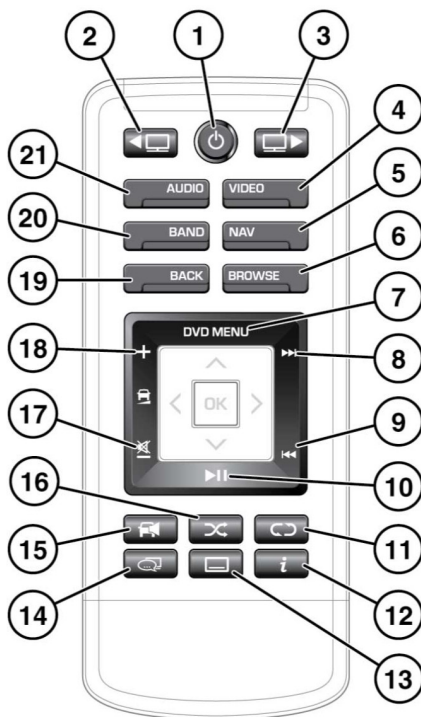

E151273

1. Press and release to turn off the screen. Press and hold to turn off the rear media system.
2. Left screen select.