



Rear media

- 8. Forward/Skip for the selected screen.
 - 9. Play/Pause for the selected screen.
 - 10. Rewind/Skip for the selected screen.
 - 11. **Source**: Touch to select the rear media source screen.
 - 12. Media source selection: Touch the required media button.
- Note:** For DAB Radio select Radio.

- 13. **Source** -: Touch to select the required media and return to the **Rear media** control screen. If required, the selected source can then be controlled via the front screen.

Note: When the main rear media control screen is displayed on the Touch screen, the rear media remote control will be locked out.

REAR MEDIA REMOTE CONTROL

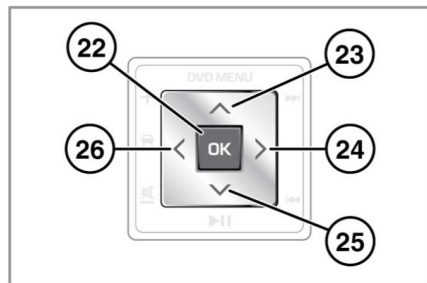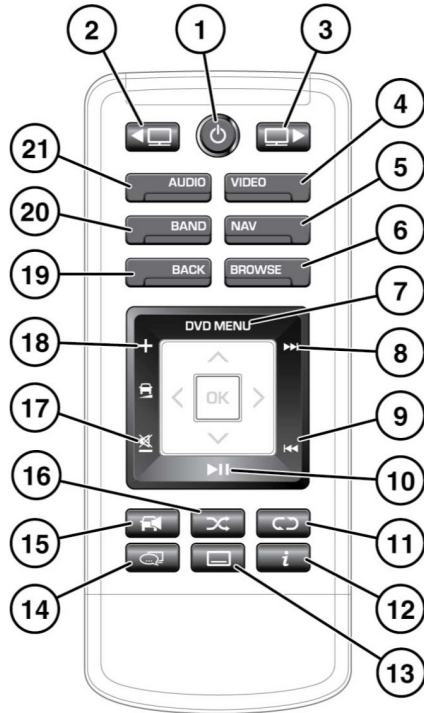

E151273

- 1. Press and release to turn off the screen. Press and hold to turn off the rear media system.
- 2. Left screen select.