

- locking wheel nuts.....246
 - recommended process.....247
 - safety warnings.....245
 - spare wheel.....246
 - temporary spare wheel.....246
 - tilt sensor.....247
 - tool kit.....245
 - use of spare tyre.....246
 - Wheel chocks use.....246
 - Wheels and tyres
 - age degradation.....237
 - changing a tyre.....240
 - checking the pressures after a repair....243
 - flat spots.....236
 - full size replacements.....240
 - Indian regulations.....238
 - pressures.....233
 - puncture repair.....241
 - puncture repair safety.....241
 - repair kit.....241
 - repair kit use.....241
 - repair procedure.....242
 - replacements.....236
 - snow chains.....238
 - specifications.....262
 - temporary use spare.....240
 - TPMS.....239
 - TPMS warning lamp.....45
 - tyre care.....233
 - tyre label.....253
 - tyre speed ratings.....233
 - tyre wall markings.....232
 - valves.....236
 - wheel alignment.....258
 - winter tyres.....237
 - Windows
 - anti-trap protection.....66
 - operation.....65
 - reset.....207
 - Winter park position.....206
 - Winter tyres.....237
 - Wipers and washers.....52
 - drip wipe.....54
 - fluid level.....216
 - rain sensor.....53
 - speed-dependent mode.....54
 - winter park position.....54
- X**
- Xenon headlamps.....201