

- ⚠ When a fuse box lid is removed, take care to protect the box from moisture, and refit the lid at the earliest opportunity.

Access can be gained to the fuses as follows:

1. Engine compartment fuse box.
 - To gain access to the fuse box: Remove the 2 plastic fixings (see illustration) and pull the tube up to release it from the air box.
 - Unlatch the tabs (arrowed) to release the fuse box cover.
The engine compartment fuse numbers and positions are shown on the inside of the fuse box cover.
2. Passenger compartment fuse box (upper): Open the glove box and remove the panel from the glove box liner. A label on the panel shows the circuits protected and the fuse locations.
3. Passenger compartment fuse box (lower): Remove the lower access panel.
4. Luggage compartment (upper and lower) fuse boxes: Remove the panel from the left side trim of the luggage compartment. A label on the panel shows the circuits protected and the fuse locations.
5. Luggage compartment (underfloor) fuse box (if fitted): Lift the luggage compartment floor and remove the spare wheel/tyre repair kit housing (see illustration). The fuse numbers are displayed on the fuse box.

CHANGING A FUSE

- ⚠ Always turn off the ignition system and the affected electrical circuit, before replacing a fuse.

- ⚠ Fit Land Rover approved replacement fuses of the same rating and type, or fuses of a matching specification. Using an incorrect fuse, may result in damage to the vehicle's electrical system and can result in a fire.

- ⚠ If the replacement fuse blows after fitment, the system should be checked by your Dealer/Authorised Repairer.

Note: Land Rover recommend that relays should only be renewed by qualified persons.

The fuse removal tweezers are located in the passenger compartment fuse box. Press the tweezers onto the head of a fuse and pull to remove. A break in the wire inside the fuse indicates that the fuse has blown and must be renewed.

There are some spare replacement fuses in the passenger compartment fuse box. See the fuse box label for details.