

## Park assist

**Note:** If a trailer is connected to a Land Rover approved trailer socket, the Park assist system will be disabled.

- It encounters an obstruction that is thin or wedge shaped.
- It encounters an obstruction that is elevated and/or protruding, such as ledges or tree branches.
- It encounters an obstruction with corners and sharp edges.

### PARK ASSIST TROUBLESHOOTING

#### **Park assist is not searching for a parking space**

- The system may not be activated.
- The vehicle may be travelling at a speed above 30 km/h (18 mph).
- The sensors may be covered or partly obscured by dirt, mud, ice or snow.

#### **Park assist does not offer a certain parking space**

- The sensors may be covered or partly obscured by dirt, mud, ice or snow.
- The space may not be large enough or there may not be enough space on the opposite side of the vehicle for the front to swing out during the manoeuvre.
- The vehicle may have been driven too far away (more than 1.5 metres [5 feet]) from a row of parked vehicles.
- The vehicle may have been driven too close (within 41 cm [16 inches]) to a row of parked vehicles.
- The vehicle may have been driven in reverse. Park assist will only search for a parking space when the vehicle is travelling in a forward direction.
- The approach angle may not be suitable.

#### **Park assist has not positioned the vehicle accurately within the space**

One or more of the system limitations criteria may have been met. See **105, PARK ASSIST LIMITATIONS**.