

AIRBAG (AMBER)



Illuminates as a bulb check when the ignition is switched on and extinguishes when the engine is started.

If the lamp illuminates when driving, there is a fault with the airbag system. Seek qualified assistance as soon as possible.

ADAPTIVE FRONT LIGHTING SYSTEM (AMBER)



Illuminates when there is a system fault. The headlamps will still operate, but without this feature operating correctly. Seek qualified assistance as soon as possible.

REAR FOG LAMP (AMBER)



Illuminates when the rear fog lamps are switched on.

GLOW PLUGS (AMBER)



Illuminates when the ignition is switched on to indicate that the glow plugs are active.

FOLLOW MODE (AMBER)



Illuminates when the Adaptive cruise control system is in follow mode.

EXTERNAL TEMPERATURE (AMBER)



Illuminates when the external temperature is low enough that ice may be present on the road.

LOW FUEL WARNING (AMBER)



Illuminates when the fuel level is low. Refuel at the earliest opportunity.

The arrow shows which side of the vehicle to locate the fuel filler cap.

TYRE PRESSURE MONITORING SYSTEM (YELLOW)



The warning lamp illuminates, accompanied by a message in the Message centre, to warn that 1 or more tyres are significantly under-inflated. Stop the vehicle as soon as possible, check the tyre pressures and inflate to the recommended pressure.

The lamp will flash to indicate a system fault.

GEAR SHIFT (GREEN)



The gear shift indicator illuminates briefly at the recommended gear change point (upshift).

The shift indicator will not illuminate while Cruise control is active and not being overridden by pressing the throttle pedal.

Note: This warning indicator is only a guide. It remains the responsibility of the driver to operate the vehicle in an appropriate manner for the prevailing conditions.

HILL DESCENT CONTROL (GREEN)



Illuminates continuously when HDC is selected and HDC operating conditions are met. See **117, HDC CONTROLS**.

If the lamp flashes, HDC has been selected, but the operating conditions are not being met or HDC fade-out is occurring.