

# Warning lamps

## CRUISE CONTROL (GREEN)



Illuminates when cruise control or Adaptive cruise control is active.

## FORWARD ALERT (GREEN)



Illuminates when Forward alert is active.

## SIDE LAMPS (GREEN)



Illuminates when the side lamps are switched on.

## FRONT FOG LAMPS (GREEN)



Illuminates when the front fog lamps are switched on.

## DIRECTION INDICATORS (GREEN)



The appropriate warning lamp will flash when the direction indicators are operated.

## TRAILER DIRECTION INDICATORS (GREEN)



Illuminates as a bulb check when the ignition is switched on and extinguishes when the engine is started.

If a trailer is attached, the warning lamp will flash in conjunction with the direction indicator warning lamp. If the lamp fails to flash, the direction indicator bulb on the trailer may be faulty.

**Note:** If the attached and connected trailer is fitted with LED lights, the bulb check may not be performed.

## HIGH BEAM ASSIST (GREEN)



Illuminates when the auto high beam feature has switched on the high beams.

## INTELLIGENT STOP/START (GREEN)



Illuminates when the engine is shut down by the Eco Stop/Start system.

**Note:** Other warnings normally associated with an engine shutdown, for example the ignition warning lamp, do not illuminate during an engine shutdown by the Eco Stop/Start system.

## HIGH BEAM (BLUE)



Illuminates when the high beam headlamps are switched on or flashed.