

Maintenance

HEADLAMP REMOVAL

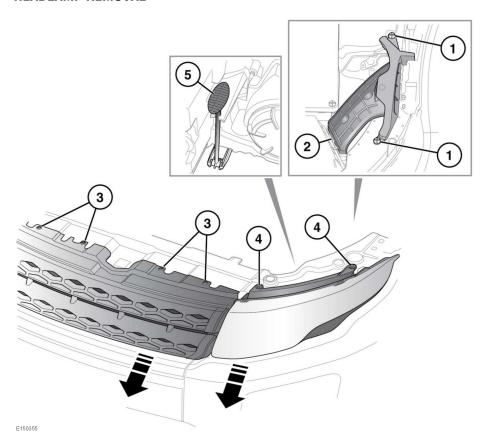

Moving the left headlamp unit to access the bulbs:

- 1. Remove the 2 plastic fixings.
- Pull the tube up to release from the air box. This will allow more room for manoeuvrability.
- 3. Remove the 4 grille fixings.
- 4. Remove the 2 retaining bolts.
- **5.** At the rear of the headlamp unit, pull up on the T grip release mechanism and hold while sliding the headlamp unit forward 40 mm (1.5 inches).

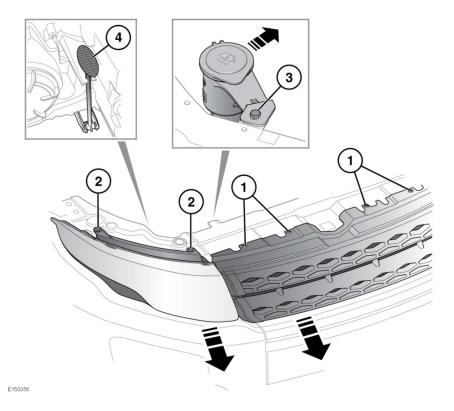

Moving the right headlamp unit to access the bulbs:

- 1. Remove the 4 grille fixings.
- 2. Remove the 2 retaining bolts.
- Remove the fixing and then move the filler tube rearwards. This will allow more room for access to the bulb holders.
- **4.** At the rear of the headlamp unit, pull up on the T grip release mechanism and hold while sliding the headlamp unit forward 40 mm (1.5 inches).