

**Note:** Make sure the forward facing sensors on the back of the rear view mirror are not blocked or obstructed.

WINDSCREEN WIPER DETECTION

If Auto lamps is selected and the windscreen wipers are switched on for 20 seconds or more, the side lamps, tail lamps and headlamps will switch on automatically. When the wipers are switched off, the lamps will automatically switch off 2 minutes later.


HEADLAMPS - CONDENSATION

Misting of lamp lenses can occur under some atmospheric conditions. This will not affect the performance of the lamps and will clear during normal operation.

HEADLAMPS - DRIVING ABROAD

The headlamp beam pattern is suitable for driving on either side of the road. There is no need for any mechanical adjustment or external decals.

HEADLAMP LEVELLING

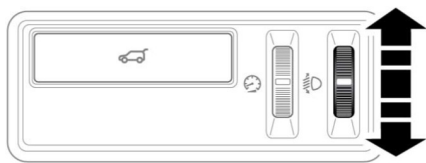

E 150305

Use the headlamp levelling control to account for vehicle loading changes.

Vehicle load	Switch position
Driver only	Top
Driver and front seat passenger	Top
Driver and passengers in all seats	Rotate down 1 notch
Maximum gross vehicle weight	Rotate down 1 notch
Maximum rear axle load	Rotate down 2 notches

ADAPTIVE FRONT LIGHTING SYSTEM (AFS)

With the headlamps on, the AFS will adjust the beams when cornering to provide an improved illumination in the direction of travel.

The AFS is deactivated when:

- Reverse gear is selected.
- The vehicle is stationary.

If a system fault is detected, the headlamps will attempt to move to the central position and then remain stationary. The AFS warning indicator will illuminate to indicate that a fault is present. See **45, ADAPTIVE FRONT LIGHTING SYSTEM (AMBER)**.

If the warning lamp illuminates, contact a Dealer/Authorised Repairer as soon as possible.