

You can connect multiple devices simultaneously to the portable media interface and switch between them using the Touch screen. Select **iPod**, **USB**, **Bluetooth** or **AUX**, to switch between modes.

The device docked first will remain the active device until you choose to change.

If, after changing to the newly-docked device, you change back to the first device, play will resume at the point you left it (USB and iPod only).

**Note:** You cannot use a USB hub to connect more than 1 USB device to the audio unit.

**Note:** Devices connected to the iPod and USB ports will be charged, but devices that are fully discharged will not play.

**Note:** Options such as **Repeat** and **Shuffle** relate to the device currently playing, they will not apply to any subsequent device.

## PAIRING AND CONNECTING USING THE MEDIA PLAYER

For further information on **Bluetooth®** wireless technology, see **155, BLUETOOTH® INFORMATION**.

**Note:** The process of pairing and connecting your media device with the vehicle, using the media device, will vary depending on the type of media device.

1. Switch on the ignition and make sure the Touch screen is active.
2. From the Home menu, select **Audio/Video**, then the **My music +** soft key.
3. Touch **Bluetooth**.
4. A menu will appear. Select **Change device**.
5. Select **Device to vehicle** option.

**Note:** The vehicle's **Bluetooth®** wireless technology system is only discoverable for 3 minutes.

6. Using the media device, search for Bluetooth wireless technology devices. On some media devices, this is referred to as new paired device. See your media device's operating instructions for further information.
7. When the vehicle's **Bluetooth®** wireless technology system is discovered, follow the on-screen instructions. Select **Yes** when prompted, to confirm the pairing. Either your device or the vehicle system will ask for a PIN (Personal Identification Number). When prompted, enter a PIN of your choice and select **OK** to confirm.
8. Enter the same PIN into the other device.
9. Once your device is paired and connected to the system, a confirmation message will be displayed, before switching to the **My music, Bluetooth** screen.

**Note:** Some media devices do not automatically connect and need to be manually connected, via the device or by using the **Change device** option.

## PORTABLE MEDIA PAIRING AND CONNECTING USING THE TOUCH SCREEN

For further information on **Bluetooth®** wireless technology, see **155, BLUETOOTH® INFORMATION**.

1. Switch on your **Bluetooth®** wireless technology device connection. Make sure that it is in **Bluetooth®** wireless technology device discoverable mode, sometimes referred to as 'find me' mode (see your device's operating instructions for more information).
2. Switch on the ignition and make sure the Touch screen is active.