

**Note:** To change any bulb in a headlamp unit, a cross head screwdriver and a 10 mm spanner is required.

## XENON LAMPS



High voltage is required to ignite the gas and metal vapour which are used to power Xenon lamps. Contact with this voltage can cause serious injury. Replacement or maintenance of Xenon lamps should only be carried out by suitably qualified personnel.



Xenon lamp units operate at a very high temperature. Make sure the lamp units have cooled before attempting to touch them.