


TELEPHONE SYSTEM OVERVIEW

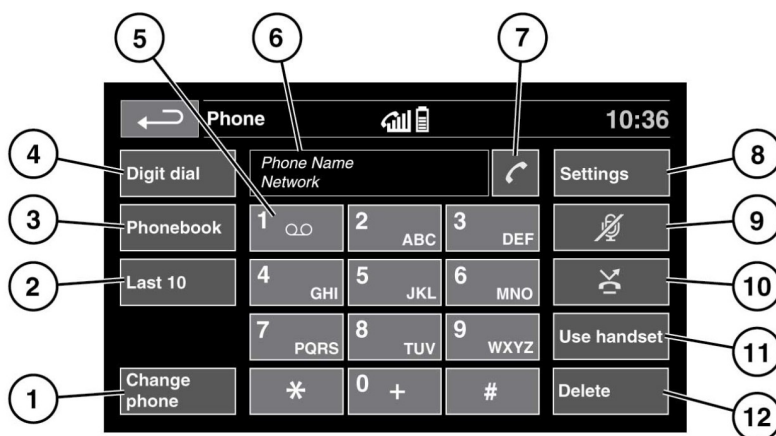

E157295

- 1. Change phone:** Search new or change to another paired phone.
- 2. Last 10:** Access the last 10 dialled, received and missed calls.
- 3. Phonebook:** Access the downloaded phonebook.
- 4. Digit dial:** Access Digit dialling mode.
- 5.** Touch and hold to retrieve your voice mail.
- 6. Status display:** Displays the name and/or number dialled and call duration.
- 7.** Call Connect/Disconnect icons. Touch to send/accept or end/reject a call.
- 8. Settings:** Access Voice mail set up, Answer options and Phone options.
- 9.** Mute microphone: Initiate Privacy mode. While selected, the caller will not hear you talking.
- 10.** Auto reject. When active, any incoming calls will be rejected or diverted to voice mail (depending on mobile phone settings).
- 11. Use handset:** Switch the call to your mobile phone.
- 12. Delete:** Touch to delete the last entered digit, and hold to delete the whole entered number.

BLUETOOTH® INFORMATION



Bluetooth® is the name for short-range Radio Frequency (RF) technology that allows electronic devices to communicate wirelessly with each other.

The Land Rover **Bluetooth** wireless technology system supports **Bluetooth®** Hands-Free Profile (HFP), Advanced Audio Distribution Profile (A2DP) and Audio Video Remote Control Profile (AVRCP).

Note: HFP and A2DP/AVRCP profiles can be connected independently, so a phone can be connected via one, while a media device can be connected via the other, at the same time.