
## Vehicle battery

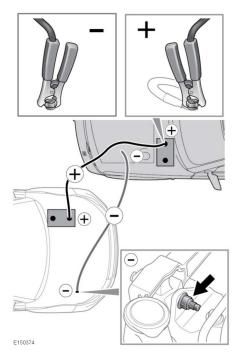

 Connect the positive (Red) jump lead to the recommended positive (+) boost terminal on the donor vehicle.

**Note:** Refer to the donor vehicle's handbook for the recommended positive boost terminal.

- Connect the other end of the positive (Red) jump lead to the positive (+) terminal on the discharged battery.
- Connect the negative (Black) jump lead to the recommended negative (-) boost terminal of the donor vehicle.

**Note:** Refer to the donor vehicle's handbook for the recommended negative boost terminal.

**4.** Connect the other end of the negative (Black) jump lead to the earth point on the disabled vehicle (as illustrated).

**Note:** Check that all cables are clear of any moving components and that all 4 connections are secure.

- **5.** Start the engine of the donor vehicle and allow it to idle for a few minutes.
- 6. Start the engine of the disabled vehicle.

**Note:** Do not switch on any electrical circuits of the disabled vehicle until after the jump leads are removed.

- 7. Allow both vehicles to idle for 2 minutes.
- 8. Switch off the donor vehicle.
- **9.** Disconnect the negative (Black) jump lead from the previously disabled vehicle.
- **10.** Disconnect the negative (Black) jump lead from the donor vehicle.
- **11.** Disconnect the positive (Red) jump lead from the previously discharged battery.
- **12.** Disconnect the positive (Red) jump lead from the donor vehicle.

## **CONNECTING A STARTING AID**

To start the vehicle using a starting aid or a slave battery, follow the instructions in the sequence given.

- Connect the positive (Red) jump lead to the positive (+) battery terminal of the discharged battery.
- 2. Connect the negative (Black) jump lead to the vehicle earth point.
- **3.** Switch on the starting aid.
- 4. Start the engine and allow it to idle.
- **5.** Disconnect the negative (Black) jump lead from the battery terminal of the vehicle.
- **6.** Switch off the starting aid.
- 7. Disconnect the positive (Red) jump lead from the battery terminal of the vehicle.