
## Towing

## **TOW BAR DIMENSIONS AND MOUNTING POINTS**

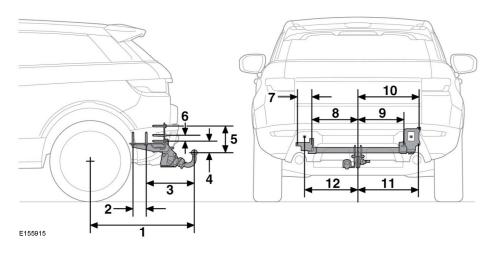

Ref.	Dimension	millimetres	Inches
1	Wheel centre to centre of tow ball	870	34.3
2	Fixing points	110	4.3
3	Fixing point to centre of tow ball	405	16.0
4	Centre of tow ball to tow bar attachment	83	3.3
5	Centre of tow ball to fixing point	220	8.7
6	Fixing points	32	1.3
7	Fixing points	130	5.1
8	Centre of tow ball to fixing point	415	16.3
9	Centre of tow ball to fixing point	415	16.3
10	Centre of tow ball to fixing point	545	21.4
11	Centre of tow ball to fixing point	550	21.6
12	Centre of tow ball to fixing point	480	18.9

**Note:** Dimensions refer to towing equipment officially released by Land Rover.