

- Make sure that a suitable breakaway cable or secondary coupling is used. Refer to the trailer manufacturer's instructions for guidance.
- Make sure that the tow ball is secure.
- Check the operation of all trailer lights.

Australia only:

Nose weight must be a minimum of 7% of gross caravan/trailer weight, up to a maximum of 150 kg (330 lb).

TRAILER ELECTRICAL CONNECTION



Attach only approved electrical connectors, which are in good condition, to the trailer socket.

The vehicle connector provides a 5 amp output which must not be exceeded. An accessory harness kit increasing output to 15 amp is available from a Dealer/Authorised Repairer.

When a trailer's electrical connection is made and the vehicle's direction indicators are used, the trailer warning indicator will flash in time with the direction indicators. See **46, TRAILER DIRECTION INDICATORS (GREEN)**.

TRAILER STABILITY ASSIST (TSA)

When a trailer is attached, TSA will automatically detect when a trailer sway is developing. It will then gradually reduce vehicle speed by cutting engine power and applying the brakes to help regain control.

HITCH ASSIST

Hitch assist is a user selectable Touch screen feature that can aid the process of guiding the vehicle to a trailer tow hitch. Use Hitch assist while reversing the vehicle to a trailer hitch.

Proceed as follows:

1. Engage reverse gear. The rear camera provides a wide-angle rear view colour image on the Touch screen.
2. Touch the **Hitch assist** icon on the Touch screen to enable the Hitch assist guidance lines to be displayed. See **99, REAR CAMERA**.
3. Reverse the vehicle towards the trailer.
4. As the vehicle closes to within 600 mm (2 ft) of the trailer tow hitch, an automated zoom feature is operated to enlarge the view.
5. Continue the manoeuvre carefully until the vehicle and trailer are as close as required.

FITTING THE DETACHABLE TOW BALL

Fit and remove instructions are supplied with this accessory fit item. Make sure they are kept in a safe place.