

The player will accommodate 1 disc at a time. With the Stored CD player up to 10 CDs can be uploaded individually to the Stored CD store.

Only discs with CDDA tracks and no other type, can be uploaded to the Stored CD store.

Insert a disc into the loading slot until resistance is felt. The player mechanism will complete the loading.

**8. Seek up:**

- Short press to auto seek up the frequency to the next radio station, to select the next track on chosen audio source CD, MP3 etc or, to select the next TV channel on the channel list or the next DVD chapter.
- Long press to activate radio manual seek mode or, to scan forwards through the current audio source track.

With radio manual seek mode activated, further short presses will change the frequency in single increments. A further long press will scan forwards through the current waveband until the button is released

**9. CD/DVD eject button.**

**10. Seek down:**

- Short press to auto seek down the frequency list to the next radio station, to select the previous track or the start of the current track on a chosen audio source CD, MP3 etc or, to select the previous TV channel on the channel list or the previous DVD chapter.
- Long press to activate the radio manual seek mode or to skip backward through the current audio source track.

With radio manual seek mode activated, further short presses will change the frequency in single decrements. A further long press will scan backward through the current waveband until the button is released.

**11. MODE:** Press this steering wheel button repeatedly to scroll through all the audio/video sources.

**12.** Press to increase the volume for any source.

**13.** Press to decrease the volume for any source.

**14. Seek down:**

- Short press to select the previous radio preset or to select the previous track or start of the current track on a chosen audio source CD, MP3 etc.

When the telephone is in use, press to scroll down the lists of calls or phonebook entries.

- Long press to auto seek down the frequency list to the next radio station.

**15. Seek up:**

- Short press to select the next radio preset or to select the next track on a chosen audio source CD, MP3 etc.

When the telephone is in use, press to scroll up the lists of calls or phonebook entries.

- Long press to auto seek up the frequency list to the next radio station.

## AUDIO SETTINGS

To view the **Audio settings** menu, select **Setup** from the Touch screen **Home menu** and then select **Audio**.

To adjust the sound settings, touch the **Tone** soft key. Touch the **+** or **-** soft keys to adjust Bass, Treble or Subwoofer levels.