

## SELECTING PARK ASSIST


Park assist is an aid to manoeuvring the vehicle in and out of parking spaces.

The system consists of 3 options.

- Parallel park assist: For a parking space that is parallel to the vehicle.

**Note:** A kerb or road edge marking is not required as the system will align to a vehicle or object at the front.

- Perpendicular park assist: For a parking space that is at 90° to the vehicle.
- Park out: For exiting a parallel parking space.

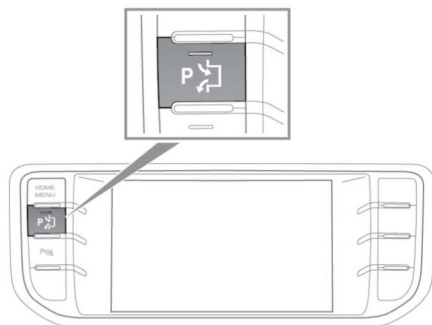

E153239

A short press of the Park assist button will switch on the Park assist system. Further presses will scroll through the Park assist options. To switch off the system, repeatedly press until the LED on the button extinguishes.



**Park assist sensors may not detect moving objects, such as children and animals, until they are dangerously close. Always use extreme caution when manoeuvring and always use your mirrors.**



**Park assist is a driving aid only. It remains the driver's responsibility to drive with due care and attention during parking manoeuvres.**



Park assist sensors may not detect some obstructions, e.g. narrow posts, small objects close to the ground, mesh fences and, in some circumstances, bicycles or motor cycles parked alongside the kerb.



All sensors must be kept clean and free from debris or obstructions, e.g., leaves, mud, snow, ice, frost or insects. Failure to keep the sensors clean may result in sensor miscalculation or false indications.



Park assist must not be used if:

- A temporary spare wheel is in use.
- A sensor is damaged or the bumper is damaged sufficiently to affect a sensor mounting point.
- A sensor is obstructed by items attached to the vehicle, e.g., bumper covers, a bicycle rack, a trailer, stickers, etc.
- The vehicle is being used to transport a load that extends beyond the vehicle perimeter, for example a trailer.

**Note:** All of the doors and the tailgate must be securely closed.

**Note:** During any Park assist manoeuvre, the Parking aid system will remain active and will sound when objects are detected near the vehicle.

**Note:** A parking manoeuvre can be cancelled at any point by holding/turning the steering wheel or by pressing the Park assist button.

**Note:** In a situation where the rows of parked vehicles on either side of the road are close enough for Park assist to sense them and Park assist determines that there is not enough manoeuvring space for reverse parking, the space will be rejected, even if the driver believes the space is large enough to park the vehicle. The driver retains the option to switch off the Park assist and to attempt the parking manoeuvre manually.