
## **ELECTRIC SEATS**

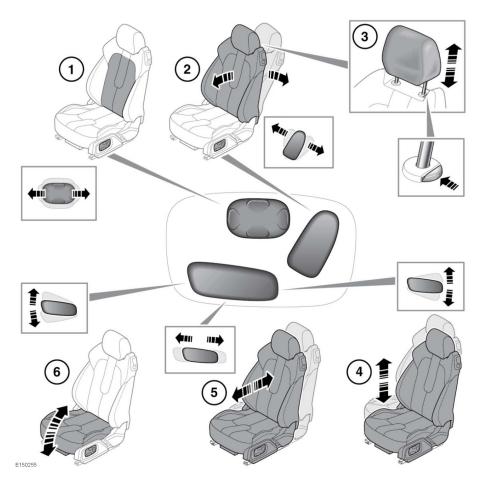

- 1. Lumbar support adjustment.
- 2. Seatback angle adjustment.
- 3. Head restraint adjustment (where fitted).
- 4. Height adjustment.
- 5. Forward and rearward adjustment.
- 6. Cushion angle adjustment.

To adjust the seats, the Smart key must be inside the vehicle.



Do not adjust the seat while the vehicle is moving. Doing so could cause a loss of vehicle control and personal injury.