


## TOUCH SCREEN HOME MENU

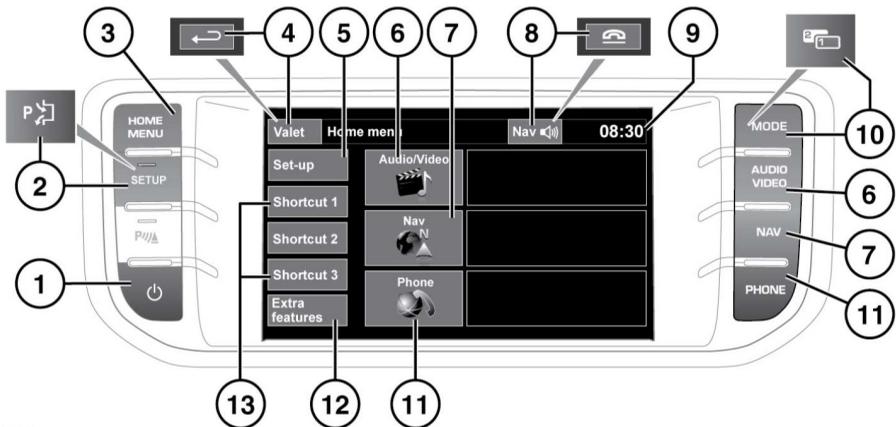

E153231



**Do not adjust the Touch screen controls, or allow the system to distract the driver, while the vehicle is moving.**



Always run the engine during prolonged use of the Touch screen. Failure to do so may discharge the vehicle's battery, preventing the engine from starting.



Avoid spilling or splashing liquids onto the Touch screen.

1. Press to turn the Touch screen on/off.
2. Press to select the Touch screen **Setup** menu. When Park assist is fitted, this icon is changed and the button should be pressed to activate Park assist.
3. Press to select the **Home menu**.
4. Touch to select the **Valet** mode. During menu mode, the icon is changed to the Back soft key, touch to return to the previous screen displayed
5. Touch to select the Touch screen **Setup** menu.
6. Touch or press to select the **Audio/Video** menu. See **126, AUDIO/VIDEO CONTROLS**.
7. Touch or press to select the **On road Navigation** menu. The current set destination is displayed.
8. While the navigation system is operating, touch to repeat the last given navigation instruction. During a phone call, the icon is changed. Touch to end the call.
9. Touch to adjust the time/date.
10. Press to select the **Mode** menu. When Dual view is fitted, this icon is changed and the button should be pressed to access the Dual view screen display.
11. Touch or press to select the **Phone** menu.
12. Touch to select the **Extra features** menu.
13. Touch to change the shortcuts. See **68, TOUCH SCREEN SETUP**.

## TOUCH SCREEN USE



Do not use excessive pressure when selecting items on the Touch screen.