
TOUCH SCREEN HOME MENU

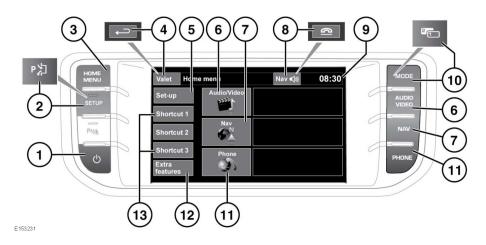

- Do not adjust the Touch screen controls, or allow the system to distract the driver, while the vehicle is moving.
- Always run the engine during prolonged use of the Touch screen. Failure to do so may discharge the vehicle's battery, preventing the engine from starting.
- Avoid spilling or splashing liquids onto the Touch screen.
- 1. Press to turn the Touch screen on/off.
- Press to select the Touch screen Setup menu. When Park assist is fitted, this icon is changed and the button should be pressed to activate Park assist.
- Press to select the Home menu.
- Touch to select the Valet mode. During menu mode, the icon is changed to the Back soft key, touch to return to the previous screen displayed
- Touch to select the Touch screen Setup menu.

- Touch or press to select the Audio/Video menu. See 126, AUDIO/VIDEO CONTROLS.
- Touch or press to select the On road Navigation menu. The current set destination is displayed.
- 8. While the navigation system is operating, touch to repeat the last given navigation instruction. During a phone call, the icon is changed. Touch to end the call.
- **9.** Touch to adjust the time/date.
- 10. Press to select the Mode menu. When Dual view is fitted, this icon is changed and the button should be pressed to access the Dual view screen display.
- **11.** Touch or press to select the **Phone** menu.
- 12. Touch to select the Extra features menu.
- **13.** Touch to change the shortcuts. See **68**, **TOUCH SCREEN SETUP**.

TOUCH SCREEN USE

• Do not use excessive pressure when selecting items on the Touch screen.