


# Audio/video overview

## AUDIO/VIDEO CONTROLS

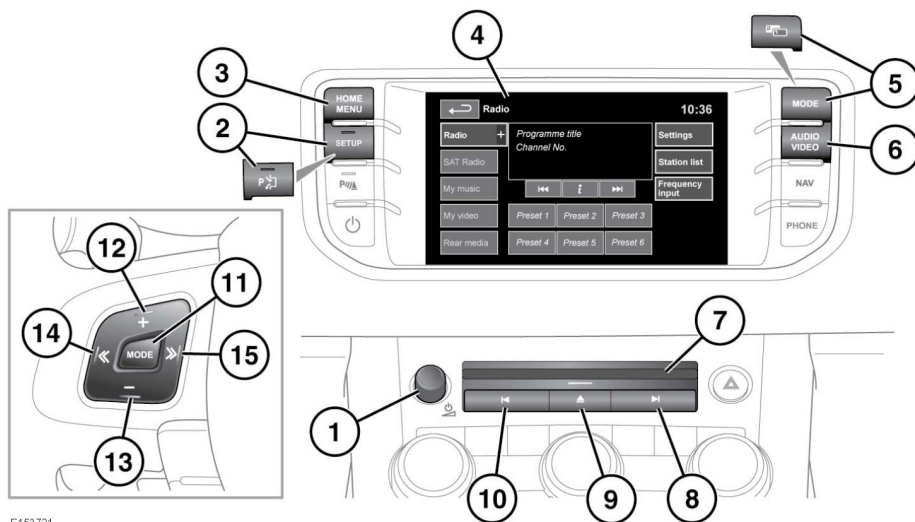

E153721

**!** In the interest of safety, only operate, adjust or view the system when it is safe to do so.

**!** Sustained exposure to high sound levels (greater than 85 decibels) can damage your hearing.

1. Press to switch the audio system on/off.

**Note:** The audio system will operate with the ignition on or off, but will always switch off when the ignition is switched off. Switch the audio on again if required. Rotate to adjust volume level.

**Note:** If volume is turned to zero while a Compact Disc (CD) is playing, the CD will pause play. Play will resume when a greater volume is selected.

2. **SETUP:** Press for direct access to the **Settings** menu. When Park assist is fitted, the icon is changed and the button will turn Park assist on and off. The **Settings** menu is then accessed via the Touch screen.

3. **HOME MENU:** Press for direct access to the Home menu screen.

4. Touch screen

5. **MODE:** Press this button repeatedly to scroll through all the audio/video sources. When Dual view is fitted, the button icon is changed and the button will turn Dual view on and off.

6. **AUDIO VIDEO:** Press for direct access to the **Audio/Video** menu.

**Audio/Video** options can include Radio, DAB Radio, My music, My video and Rear media.

My music consists of CD, Stored CD, MP3, USB, iPod® and AUX.

My video includes CD/DVD, USB, iPod® and TV.

7. CD or Digital Versatile Disc (DVD) loading slot.