
Maintenance


Access to a rear fog lamp housing is from beneath and behind the rear bumper. The bulb holder is a black plastic unit that incorporates the bulb. No tools are required but a torch may be of use.

- 1. To remove the bulb holder, press in the outer wings on the black plastic unit and pull the holder free of the housing.
- To separate the bulb holder from the electrical connector, first push up the connector lock.
- 3. Push in the release mechanism while pulling the connector and bulb holder apart.

Note: Inside the bulb holder are 3 locating lugs. When fitting the new bulb unit, the lugs must mate up to the connector correctly.

Refitting is a reverse of the removal process. Make sure the connector lock is pressed down and that the bulb unit locates securely into the fog lamp housing.

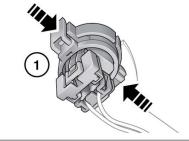

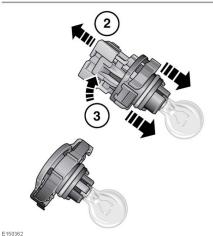

WIPERS SERVICE POSITION

Before changing a front wiper blade, the wiper arms must be set in the 'service' position as follows:

Note: The Smart key must remain in the vehicle while the wiper blades are being renewed.

1. Make sure the ignition is turned off.

position.

- 2. Turn the ignition on and then off again.
- Immediately push the wiper control down to start the single wipe operation and turn the ignition on again. The wipers will move to their service