
Standard audio system

STANDARD RADIO CONTROLS

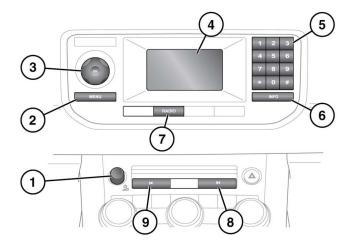

E150341

$ar{\mathbf{W}}$

Sustained exposure to high sound levels can damage your hearing.

1. Press to switch on/off.

Note: The radio will switch off automatically after approximately 10 minutes if the ignition is turned off.
Rotate to adjust volume level.

Note: The maximum volume level will be restricted if the audio unit is used with the engine switched off.

2. MENU button:

- Audio settings.
- Clock settings.
- Language.
- 3. **OK** and navigation menu control:

 Use the navigation control to move to any menu cursor/highlight. When the required option is highlighted, press the **OK** button to select.
- **4.** Audio Information display.
- **5.** Keypad.

- **6. INFO**: Traffic/News information.
- RADIO: Waveband select (FM, FMAST, AM, AMAST).
 When DAB is fitted, select for DAB1 or
- DAB2. 8. Seek up:
 - Short press to select the next radio station upward in frequency.
 - Long press to enter radio manual seek mode. In radio manual seek mode further short presses will change the frequency in single steps.
- 9. Seek down:
 - Short press to select the next radio station downward in frequency.
 - Long press to enter radio manual seek mode. In radio manual seek mode further short presses will change the frequency in single steps.