

10. The number of plies in both the tread area, and the sidewall area, indicates how many layers of rubber coated material make up the structure of the tyre. Information is also provided on the type of materials used.
11. Wear rate indicator. A tyre rated at 400 for example, will last longer than a tyre rated at 200.
12. The traction rating grades a tyre's performance when stopping on a wet road surface. The higher the grade, the better the braking performance. The grades, from highest to lowest are; **AA, A, B and C**.
13. The maximum load which can be carried by the tyre.
14. Heat resistance grading. The tyre resistance to heat is grade **A, B or C**, with **A** indicating the greatest resistance to heat. This grading is provided for a correctly inflated tyre, which is being used within its speed and loading limits.
15. The maximum inflation pressure for the tyre. See **236, AVOIDING FLAT SPOTS**.

## SPEED RATING

Rating	Speed km/h (mph)
Q	160 (99)
R	170 (106)
S	180 (112)
T	190 (118)
U	200 (124)
H	210 (130)
V	240 (149)
W	270 (168)
Y	300 (186)

## TYRE CARE



**Do not drive the vehicle if a tyre is damaged, excessively worn, or incorrectly inflated.**



**Avoid contaminating the tyres with vehicle fluids as they may cause damage to the tyre.**



**Avoid spinning the wheels. The forces released can damage the structure of the tyre and cause it to fail.**



**If wheel spin is unavoidable due to a loss of traction (in deep snow for example), do not exceed the 50 km/h (30 mph) point on the speedometer.**



**Do not exceed the maximum pressure stated on the sidewall of the tyre.**

***Note:** Tyre condition should be checked after the vehicle has been used off-road. As soon as the vehicle returns to a normal, hard, road surface, stop and check for damage to the tyres.*

All of the vehicle's tyres (including the spare) should be checked regularly for damage, wear and distortion. If you are in any doubt about the condition of a tyre, have it checked immediately by a tyre repair centre or a Dealer/Authorised Repairer.

## TYRE PRESSURES



**All tyre pressures, including the spare, should be checked regularly using an accurate pressure gauge, when the tyres are cold.**



**Pressure checks should be carried out only when the tyres are cold, and the vehicle has been stationary for more than 3 hours. A hot tyre at, or below, recommended cold inflation pressure, is dangerously under-inflated.**



**Never drive your vehicle if the tyre pressures are incorrect. Under-inflation causes excessive flexing and uneven tyre wear. This can lead to sudden tyre failure. Over-inflation causes harsh ride, uneven tyre wear and poor handling.**






**Do not drive the vehicle with a leaking tyre. Even if the tyre appears to be inflated it could be dangerously under-inflated and will continue to deflate. Renew the tyre or contact an approved repairer.**



**Under-inflation also reduces fuel efficiency and tyre tread life and may affect the vehicle's handling and stopping ability.**




**If the vehicle has been parked in strong sunlight, or used in high ambient temperatures, do not reduce the tyre pressures. Move the vehicle into the shade and allow the tyres to cool before rechecking the pressures.**

	kPa	bar	psi	kPa	bar	psi
XXX/XXX/XXX/XXX	XXX	X.X	XX	XXX	X.X	XX
XXX/XXX/XXX/XXX	XXX	X.X	XX	XXX	X.X	XX
XXX/XXX/XXX/XXX	XXX	X.X	XX	XXX	X.X	XX
XXX/XXX/XXX/XXX	XXX	X.X	XX	XXX	X.X	XX
XXX/XXX/XXX/XXX	XXX	X.X	XX	XXX	X.X	XX
XXX/XXX/XXX/XXX	XXX	X.X	XX	XXX	X.X	XX

XXX-XXX-XX

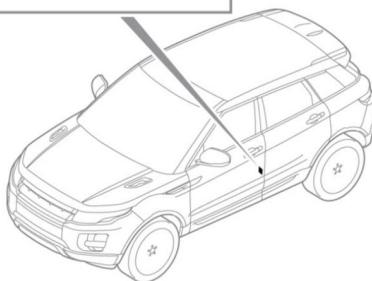

The tyre information label is located on the driver's side B pillar.

Check the tyres, including the spare, for condition and pressure on a weekly basis and before long journeys.

Dependent on market, the tyre pressures can be displayed in the Message centre using the **Vehicle Info** and **Tyre Pressure Check** Instrument panel menus. See **40, INSTRUMENT PANEL MENU**. The display will show 2 tyre pressures for each tyre. The upper figure is the present tyre pressure and the lower figure (in brackets) is the recommended tyre pressure.

**Note:** The tyre pressure units can be configured to display as either psi, bar, or kPa via the **Instrument Display menu**.

If tyre pressures are checked while the vehicle is inside a protected covered area (e.g. a garage) and subsequently driven in lower outdoor temperatures, tyre under-inflation could occur.

A slight pressure loss occurs naturally with time. If this exceeds 14 kPa (0.14bar/2 psi) per week, have the cause investigated and rectified by qualified personnel.

If it is necessary to check tyre pressures when the tyres are warm, you should expect the pressures to have increased by up to 30 - 40 kPa (0.3 - 0.4 bar/4 - 6 psi). Do not reduce the tyre pressures to the cold inflation pressure under these circumstances. Allow the tyres to cool fully before adjusting the pressures.

The following procedure should be used to check and adjust the tyres pressures:



To avoid damaging the valves do not apply excessive force or sideways force on the gauge/inflator.

1. Remove the valve cap.
2. Firmly attach a tyre pressure gauge/inflator to the valve.

3. Read the tyre pressure from the gauge and add air if required.
4. If air is added to the tyre, remove the gauge and re-attach it before reading the pressure. Failure to do so may result in an inaccurate reading.
5. If the tyre pressure is too high, remove the gauge and allow air out of the tyre by pressing the centre of the valve. Refit the gauge to the valve and check the pressure.
6. Repeat the process, adding or removing air as required, until the correct tyre pressure is reached.
7. Refit the valve cap.

Temporary use spare - maximum 80 km/h (50 mph)			
Tyre size	Load/speed index	Front pressures bar (psi. kPa)	Rear pressures bar (psi. kPa)
155/85 R18	-	4.2 (61, 420)	4.2 (61, 420)

Tyre size	Load/speed index	Front pressures bar (psi. kPa)	Rear pressures bar (psi. kPa)
225/65 R17*	106V	2.4 (35, 240)	2.1 (30, 210)
235/60 R18	103/107V	2.4 (35, 240)	2.1 (30, 210)
235/55 R19	101/105V	2.5 (36, 250)	2.2 (32, 220)
245/45 R20**	99/103V	2.5 (36, 250)	2.2 (32, 220)

\* Retailer option wheel and tyre for use with snow chains or traction devices.

\*\* If your vehicle is fitted with 245/45 R20 tyres, then the vehicle will be delivered with the tyre pressures set as stated on the tyre pressures label in order to optimise low speed ride comfort. For vehicle speeds in excess of 160km/h (100mph), the pressures must be increased as indicated in the following table.

245/45 R20 Tyres	Front pressures bar (psi. kPa)	Rear pressures bar (psi. kPa)
Speeds up to 160 km/h (100 mph)	2.5 (36, 250)	2.2 (32, 220)
Speeds over 160 km/h (100 mph)	2.7 (39, 270)	2.4 (35, 240)

**Note:** Make sure to reset the tyre pressures to the correct pressure when the vehicle will be travelling at speeds less than 160 km/h (100 mph).