

## Exterior lights

With the lighting control in the OFF position or in the AUTO position, while the lighting conditions do not require the headlamps to be on, then the Daytime running lamps will switch on automatically under the following conditions:

- The engine is running.
- The gear selector is out of Park (automatic transmission).
- The parking brake is not applied - market dependent.



Unless required or prohibited by law, the Daytime running lamps feature can be disabled or enabled by a Dealer/Authorised Repairer.

### HEADLAMP COURTESY DELAY

This feature operates whenever the lamps master switch is in the AUTO (5) position and the ignition is turned off. The headlamps will remain illuminated for up to 240 seconds.

**Note:** The time delay may be changed via the **Vehicle Set-up** menu. See **40, INSTRUMENT PANEL MENU**.

The Courtesy delay can be switched off at any time by pressing the headlamp button on the Smart key.

### HIGH BEAM ASSIST

This feature of the Xenon lighting automatically selects and deselects the high beam, under specific conditions of road lighting and in the absence of other vehicle's lights. The system is only active when the ambient light drops below a predetermined level.

**Note:** It is not recommended that High beam assist is used while driving off road.

For High beam assist to become operational, the main lighting switch must be in the AUTO position (5), with dipped beam headlamps selected.

The Instrument panel warning lamp illuminates when High beam assist is selected. See **46, HIGH BEAM ASSIST (GREEN)**.

High beam assist will activate only when the vehicle's speed exceeds 40 km/h (25 mph). The system will deactivate when the vehicle's speed drops below 24 km/h (15 mph).

To manually select high beam, move the stalk to the high beam position as normal. To return to High beam assist, move the stalk back to the central position.

To manually override to dipped beam from high beam, pull the stalk to the flash position (2) and High beam assist will be cancelled. To return to High beam assist, push the stalk to the high beam position (1) and then return it to the central position.

To turn off High beam assist, turn the main lighting control from Auto to headlamps.

This feature can be disabled/enabled via the **Vehicle Set-up** menu. See **40, INSTRUMENT PANEL MENU**.

The following may affect the operation of High beam assist:

- Highly reflective road signs.
- Dimly lit road users, for example cyclists or pedestrians.
- Adverse weather conditions, for example rain or fog.
- Dirty or obscured sensor.
- Dirty, damaged, or misted windscreen.
- Oncoming vehicles partially obscured by a central highway barrier.

**Note:** The system cannot be relied upon to activate or deactivate the high beam in all possible circumstances. It remains the driver's responsibility to make sure of the correct use of the headlamps at all times.