

# Heating and ventilation



**Do not operate the auxiliary heater while the vehicle is in an enclosed space. Doing so can cause a build up of highly toxic fumes which may cause unconsciousness or death.**

## TIMED CLIMATE CONTROL

The timed climate control system provides a comfortable temperature inside the cabin in advance of driver and passengers entering. Dependent on the external temperature, the system draws in fresh air to cool the cabin or operates the auxiliary heater to warm it.

The Auxiliary heater is also operated to warm the engine and aid starting in very cold conditions.

The timed climate control system may be operated by either the Touch screen or the remote handset.

The system may not operate or will switch off automatically in the following scenarios:


- If the fuel level is low.
- If the vehicle's battery charge is low.
- If the coolant temperature is at or above its required temperature.

## SETTING A TIME FOR TIMED CLIMATE OPERATION

The Touch screen can be used to either preset activation times or to operate the system manually.

When the system is operating, the LED in the climate control **AUTO** button will flash.

**Note:** The system will cease operation if the engine is started

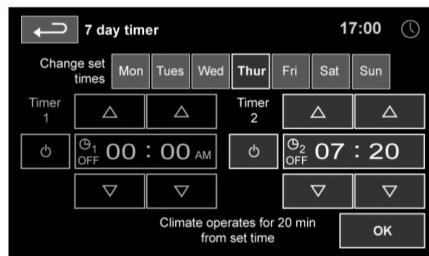

E140084

To set a timed climate programme:

1. Press the **HOME MENU** hard key.
2. Touch the **Timed Climate** soft key. This soft key may be set on a personal shortcut or accessed via the **Extra Features** soft key. Select the day for which you want to set a programme or select **All Week** to select the same start time for every day.
3. Touch the **Timer 1** or **Timer 2** icon. The timers can be toggled between on and off using the power soft key.
4. Touch the up or down arrows to set the start time. Hours and minutes are adjusted separately.
5. Touch **OK**. The screen will display the activation time. If required, set the time for the other timer using the same process.

**Note:** The time format, 12/24 hour clock, is determined by the time settings currently selected in the **System settings** menu. See **40, INSTRUMENT PANEL MENU**.

A current heating cycle will be cancelled if the engine is started. Any programmed heating cycle may be cancelled by touching the relevant power soft key on the timer set up menu or the **Power** soft key on the **Timed Climate** information home menu.