


## RADIO CONTROLS (STANDARD SYSTEM)

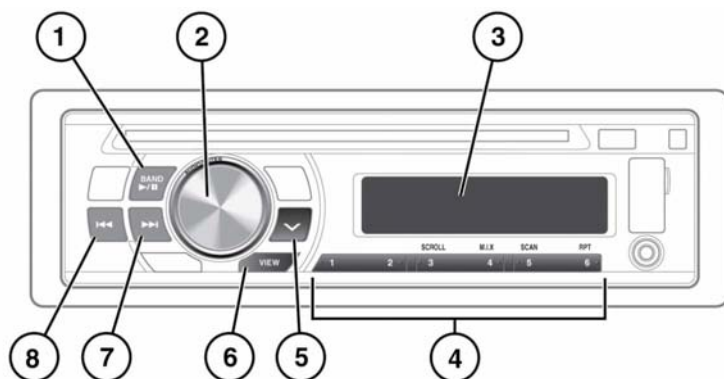

E147648

### 1. Band select/auto store.

- Short press - switch between bands. Select from **FM1**, **FM2**, **FM3**, **MW** and **LW**.
- Long press - automatically tune and store 6 radio frequencies as presets.

### 2. Volume control/menu select:

- Rotate to adjust the volume.
- When a menu is open, rotate to switch between menu items and press to confirm a selection.

### 3. Information display screen.

### 4. Preset stations:

- Short press - select a preset station.
- Long press - store the current radio frequency.

### 5. Press and hold to turn on TA (Traffic Announcements).

### 6. Change the displayed information.

### 7. Seek up:

- Short press - auto seek up the frequency to the next radio station.

- Long press - seek continuously up through the radio frequencies.

### 8. Seek down:

- Short press - auto seek down the frequency to the previous radio station.
- Long press - seek continuously down through the radio frequencies.

## RADIO DATA SYSTEM (RDS)

RDS is a radio information system available from FM broadcasts. RDS allows reception of information such as traffic information and station names and also allows automatic retuning to a stronger transmitter that is broadcasting the same programme.

### 1. Press and hold the **AUDIO/SETUP** button to open the setup menu.

### 2. Select **TUNER**.

### 3. The following options are now available for selection.

- **AF** - Alternative frequencies. Select **ON** or **OFF**.
- **REGIONAL** - Regional programming. Select **ON** or **OFF**.

- **PI SEEK** - Programme information seek.  
Select **ON** or **OFF**.
4. Press and hold **AUDIO/SETUP** to close the setup menu.