
RADIO CONTROLS (STANDARD SYSTEM)

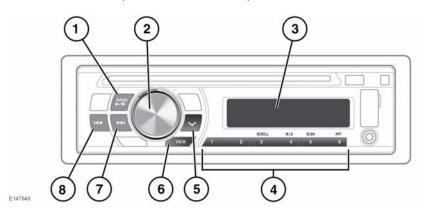

- 1. Band select/auto store.
 - Short press switch between bands.
 Select from FM1, FM2, FM3, MW and LW.
 - Long press automatically tune and store 6 radio frequencies as presets.
- 2. Volume control/menu select:
 - Rotate to adjust the volume.
 - When a menu is open, rotate to switch between menu items and press to confirm a selection.
- 3. Information display screen.
- 4. Preset stations:
 - Short press select a preset station.
 - Long press store the current radio frequency.
- **5.** Press and hold to turn on TA (Traffic Announcements).
- **6.** Change the displayed information.
- 7. Seek up:
 - Short press auto seek up the frequency to the next radio station.

- Long press seek continuously up through the radio frequencies.
- 8. Seek down:
 - Short press auto seek down the frequency to the previous radio station.
 - Long press seek continuously down through the radio frequencies.

RADIO DATA SYSTEM (RDS)

RDS is a radio information system available from FM broadcasts. RDS allows reception of information such as traffic information and station names and also allows automatic retuning to a stronger transmitter that is broadcasting the same programme.

- 1. Press and hold the **AUDIO/SETUP** button to open the setup menu.
- 2. Select TUNER.
- The following options are now available for selection.
 - AF Alternative frequencies. Select ON or OFF.
 - **REGIONAL** Regional programming. Select **ON** or **OFF**.

- **PI SEEK** Programme information seek. Select **ON** or **OFF**.
- **4.** Press and hold **AUDIO/SETUP** to close the setup menu.