


MANUAL SEATS

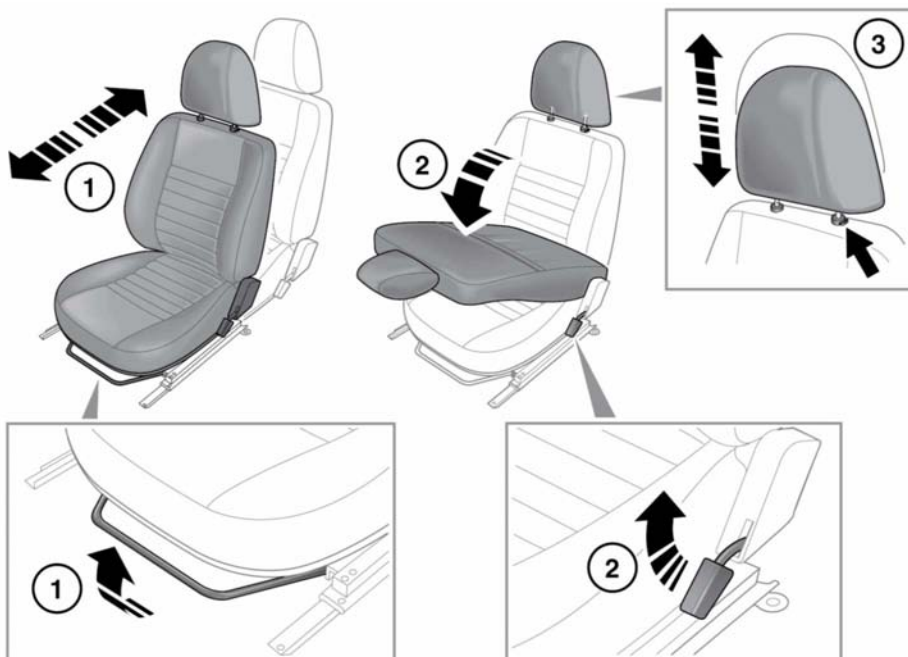

E135661

1. Lift locking bar for forward and backward adjustment.
2. Lift locking lever for seat back angle adjustment.
3. Squeeze locking collar for head restraint height adjustment.


SITTING IN THE CORRECT POSITION



The driver and front seat passenger must not ride with the seat fully reclined.



Do not adjust the seat while the vehicle is moving. Doing so could cause loss of vehicle control and personal injury.

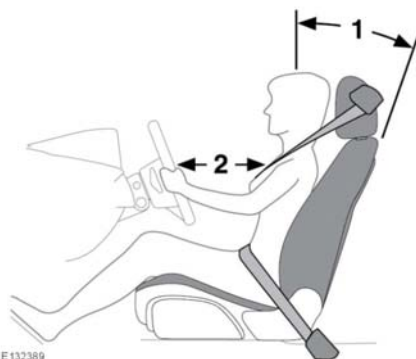

E132389