

G

Gearbox	
differential lock.....	45
differential lock wind up.....	45
manual.....	44
stationary range changing.....	44
transfer gearbox.....	44
Glow plugs	
warning lamp.....	29

H

Handbook symbols.....	2
Handbrake.....	47
Headlamps.....	21
bulb change.....	71
bulb changing.....	70
bulb specification.....	113
condensation.....	22
high beam warning lamp.....	30
removal.....	70
Head restraints	
adjustment.....	14
removing.....	14
Heated screens.....	31
Heated seats.....	32
Heating and ventilation.....	31
front.....	31
heated seats.....	32

I

Indicators warning lamp.....	30
Infotainment	
automatic station retune.....	54
controls.....	48, 50
display screen colour.....	51
MP3 file playing.....	59
portable media	
connecting devices.....	58
controls.....	56–57
pairing.....	58
search.....	58
radio controls.....	52
setting the control method.....	58

Instrument panel.....	28
warning lamps.....	29
Interior cleaning.....	76
Interior lamps.....	23
bulb changing.....	70
bulb specification.....	113
types.....	23
Interior locking.....	8

J

Jacking points.....	99
Jacking up the vehicle.....	98
Jump starting	
connecting jump leads.....	86

L

Label locations.....	104
Lamps.....	21
brake lamp.....	72
bulb changing.....	70
bulb replacement.....	71
bulb specification.....	113
condensation.....	22
warning lamps.....	29
Lashing points.....	102
Leather cleaning.....	76
License plate bulb.....	73
Lighting	
interior lamps locations.....	23
Load carriers	
roof mounted.....	34
Load carrying	
securing a load.....	34
Load securing.....	34
Locking	
door locks and release levers.....	8
double locking.....	8
mislock.....	8
single locking.....	8
Locking wheel nuts.....	97
Low fuel warning lamp.....	30
Low oil pressure warning lamp.....	29