

E

Effects of battery disconnection.....	88
Electric windows	
operation.....	25
Electrolyte level	
battery condition.....	85
Emergency key access	
entering the security code.....	5
Engine	
antifreeze level.....	79
compartment opening.....	69
coolant level.....	79
diesel fuel.....	63
diesel particulate filter (DPF).....	67
engine compartment	
poisonous fluids.....	69
engine malfunction warning lamp.....	29
malfunction warning lamp.....	29
oil level.....	78
specifications.....	105
Engine compartment	
fluid filler locations.....	78
Engine starting.....	43
Exiting the vehicle	
arming the alarm.....	8
closing mislock.....	8
door locks and release levers.....	8
interior locks.....	8
Exterior cleaning.....	75
Exterior lamps	
bulb changing.....	70
bulb specification.....	113
Exterior mirrors	
electric.....	27
manual.....	27

F

Fluids	
brake	
check.....	81
specification.....	81
top up.....	81
capacities.....	111

clutch check.....	80
clutch fluid specification.....	80
clutch fluid top up.....	80
coolant	
specification.....	79
top up.....	79
engine oil check.....	78
filler locations.....	78
oil	
top up.....	79
power steering	
specification.....	83
power steering check.....	82
specifications.....	112
washer fluid.....	82
check.....	82
specification.....	82
Fog lamps	
warning lamps	
rear.....	30
Front climate control.....	31
Front wipers.....	24
Fuel and refuelling.....	64
consumption.....	66
diesel.....	63
diesel fuel sulphur content.....	63
filler flap.....	64
fuel filler cap.....	64
fuel specification.....	66
running out.....	63
safety precautions.....	63
Fuel consumption.....	66
Fuel filler cap.....	64
Fuel gauge.....	28
Fuel system.....	69
Fuse box	
passenger compartment.....	90
Fuses	
changing.....	89
locations.....	89
passenger compartment fuse box.....	90
secondary fuse box.....	91