

- to scan forward through the track on the chosen audio source - CD, MP3 etc.

16. Seek down.

- Short press:
 - to auto seek down the frequency to the previous radio station.
 - to select the previous track on the chosen audio source - CD, MP3 etc.
- Long press:
 - to seek continuously down through the radio frequencies.
 - to scan back through the track on the chosen audio source - CD, MP3 etc.

- **TYPE3** - amber and red.
- **TYPE4** - red.

5. Press and hold **AUDIO/SETUP** to close the setup menu.

SETTING THE CLOCK

The clock can be set to automatically adjust according to RDS (Radio Data System) information.

1. Press and hold **AUDIO/SETUP** to open the setup menu.
2. Select **TUNER**.
3. Select **AUTO CLOCK**.
4. Select **A-CLOCK ON** to enable or **A-CLOCK OFF** to disable.
5. Press and hold **AUDIO/SETUP** to close the setup menu.

INTERFACE COLOUR

The illumination colour of the audio system can be changed.

1. Press and hold **AUDIO/SETUP** to open the setup menu.
2. Select **DISPLAY**.
3. Select **ILLUM**.
4. Select from the following options:
 - **TYPE1** - blue and red.
 - **TYPE2** - green.