


AUDIO CONTROLS

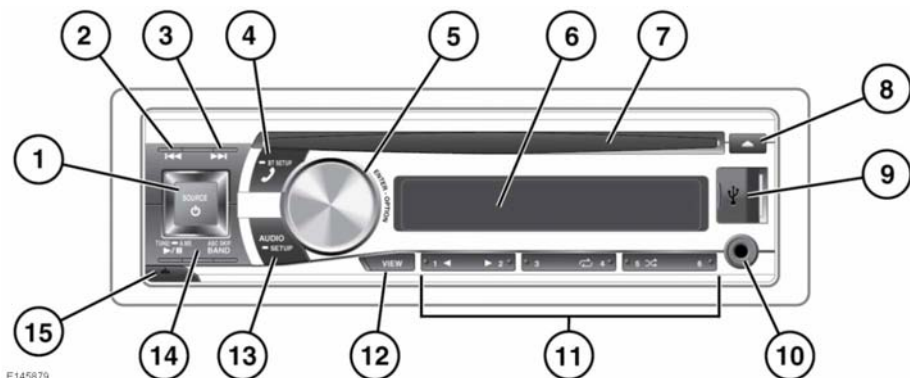

1. Power/source.

- Press and hold to turn on/off the audio system.
- Press briefly to switch source between **TUNER**, **DISC**, **USB AUDIO/iPod**, **BT AUDIO**, and **AUXILIARY**.

2. Seek down.

- Short press:
 - to auto seek down the frequency to the previous radio station.
 - to select the previous track on the chosen audio source (CD, MP3 etc).
- Long press:
 - to seek continuously down through the radio frequencies.
 - to scan back through the track on the chosen audio source (CD, MP3 etc).

3. Seek up.

- Short press:
 - to auto seek up the frequency to the next radio station.
 - to select the next track on the chosen audio source (CD, MP3 etc).

• Long press:

- to seek continuously up through the radio frequencies.
- to scan forward through the track on the chosen audio source - (CD, MP3 etc).

4. Accept/disconnect a telephone call. Press and hold to access the Bluetooth setup menu.

5. Volume control/menu select.

- Rotate to adjust the volume. When a menu is open, rotate to select the various menu items.
- Press to select a menu item.

6. Audio information display.

7. CD loading slot.

8. CD eject.

9. USB connection.

10. Auxiliary audio input.

11. Preset buttons.

12. Change the displayed information.

13. AUDIO/SETUP.

- Short press: access the audio settings.

- Subwoofer.
 - Bass.
 - Mid.
 - Treble.
 - Balance.
 - Fade.
 - Loudness.
 - Defeat.
 - Volume.
 - Long press: access the audio setup menu.
- 14.** Select tuning mode or pause/play current audio source (CD, MP3 etc.).
 - 15.** Release button. Release and remove the audio system face plate for security or to access the system reset button.