

Low range gearbox	
selecting high range on the move.....	45
Lubricants specifications.....	112
Luggage	
loadspace area.....	34
Luggage compartment	
anchor points.....	34

M

Main fuse box.....	90
Maintenance	
after off-road driving.....	75
arduous driving conditions.....	68
brake fluid level.....	81
bulb changing.....	70
bulb specification.....	113
capacities.....	111
changing a fuse.....	89
cleaning	
alloy wheels.....	75
exterior.....	75
interior.....	76
leather.....	76
seat belts.....	76
under body.....	75
closing the bonnet.....	70
clutch fluid level.....	80
daily checks.....	67
diesel particulate filter (DPF).....	67
engine coolant level.....	79
engine oil level.....	78
fuel system.....	69
jump starting.....	86
label locations.....	104
lubricants and fluid specifications.....	112
number plate bulb.....	73
oil top up.....	79
paintwork repair.....	75
passenger compartment fuse box.....	90
power steering fluid level.....	82
secondary fuse box.....	91
smart key battery.....	6
using jump leads.....	86
washer fluid level.....	82

weekly checks.....	67
Manual seats.....	9
base refit.....	11
base removal.....	10
Manual sunroof	
operation.....	26
removal.....	26
Minor paintwork repairs.....	75
Mirrors	
exterior mirrors.....	27
Modifications for disabilities.....	67
MP3 files	
folders.....	59
playing.....	59
Mpg.....	66

N

Number plate bulb.....	73
------------------------	----

O

Occupant safety	
cleaning seat belts.....	76
seat belt care points.....	16
seat belt safety.....	16
using seat belts.....	15
Off-road driving	
cleaning after.....	75
Oil	
engine oil specification.....	79
filler locations.....	78
poisonous fluids.....	69
specification.....	112
top up.....	79
used engine oil.....	69
Opening the bonnet.....	69
Operating the jack.....	98
Owner maintenance.....	67

P

Paintwork	
repair.....	75
Pairing	
via the audio system.....	61