

A

About this handbook.....	2
Accessories.....	74
Air conditioning	
front.....	31
Anchor points (luggage).....	34
Anti-lock braking system (ABS) warning lamp.....	30
Arduous driving conditions.....	68
Audio	
automatic station retune.....	54
balance and fade.....	48, 50
connecting portable media devices.....	58
controls.....	48, 50
display screen colour.....	51
MP3 file playing.....	59
on/off.....	48, 50
portable media controls.....	56–57
portable media pairing.....	58
portable media search.....	58
radio controls.....	52
setting the control method.....	58
tone.....	48, 50
volume.....	48, 50
waveband selection.....	48, 50
Automatic transmission	
stationary range changing.....	44
transfer gearbox.....	44

B

Battery	
booster cables.....	86
care.....	84
charging.....	87
effects of disconnection.....	88
electrolyte level.....	85
jump starting.....	86
replacing.....	87
using jump leads.....	86
warning lamp.....	29
Battery booster cables.....	86
Bluetooth	
compatibility.....	60

deleting the connected phone.....	62
disconnecting the connected phone.....	61
pairing	
via the audio system.....	61
via the phone.....	61
phonebook search.....	62
portable media	
pairing.....	58
telephone	
overview.....	60
phonebook.....	62
visibility.....	61
Bonnet	
closing.....	70
opening.....	69
Booster seats for larger children.....	20
Boost starting.....	86
Brakes	
ABS warning lamp.....	30
fluid check.....	81
fluid specification.....	81
fluid top up.....	81
handbrake.....	47
high level brake lamp.....	72
important information.....	47
parking brake.....	47
warning lamp.....	29

Bulbs

changing a bulb.....	70
direction indicator.....	71
interior bulbs replacement.....	74
license plate.....	73
number plate.....	73
rear lamp.....	72
side lamp.....	71
side repeater lamp.....	73
specification.....	113

C

Capacities.....	111
CD player	
controls.....	48, 50
portable media pairing.....	58
portable media search.....	58