

Warning lamps

DIESEL PARTICULATE FILTER (DPF) (AMBER)



Illuminates when the DPF is approaching capacity. If this warning lamp illuminates, carry out the DPF regeneration procedure as soon as possible (see **67, DIESEL PARTICULATE FILTER (DPF)**).

ANTI-LOCK BRAKING SYSTEM (ABS) (AMBER)

ABS

If the lamp remains on or illuminates while driving, a fault is detected. Avoid heavy brake application and seek qualified assistance urgently.

TRACTION CONTROL (AMBER)



Illuminates for minimal periods whenever traction control is operating. Continuous illumination indicates a fault. Seek qualified assistance urgently.

DIFFERENTIAL LOCK (AMBER)



Illuminates when the differential is locked. Continued illumination when the transmission has been unlocked may indicate transmission wind-up. Reversing then moving forward will usually rectify the problem. If illumination remains, seek qualified assistance as soon as possible.

REAR FOG LAMP (AMBER)



Illuminates when the rear fog lamps are operating.

HIGH BEAM (BLUE)



Illuminates when headlamps main beam is selected.

DIRECTION INDICATORS (GREEN)



The appropriate lamp flashes while a direction indicator is in use. If it fails to flash or flashes very rapidly, one of the bulbs has failed.

SIDE LAMPS (GREEN)



Illuminates when the side lamps are operating.

SIDE LIGHTS (GREEN)



Illuminates when the side lamps are operating.

TRAILER DIRECTION INDICATORS (GREEN)



Flashes when a trailer is attached and the direction indicators are in use. If there is no flash, a trailer bulb has failed.

LOW FUEL WARNING (AMBER)



Located in the fuel gauge, this illuminates when remaining fuel drops to 9 litres (2 gallons). Refuel at the first opportunity.