

## Warning lamps

### DIESEL PARTICULATE FILTER (DPF) (AMBER)



Illuminates when the DPF is approaching capacity. If this warning lamp illuminates, carry out the DPF regeneration procedure as soon as possible (see **67, DIESEL PARTICULATE FILTER (DPF)**).

### ANTI-LOCK BRAKING SYSTEM (ABS) (AMBER)

**ABS**

If the lamp remains on or illuminates while driving, a fault is detected. Avoid heavy brake application and seek qualified assistance urgently.

### TRACTION CONTROL (AMBER)



Illuminates for minimal periods whenever traction control is operating. Continuous illumination indicates a fault. Seek qualified assistance urgently.

### DIFFERENTIAL LOCK (AMBER)



Illuminates when the differential is locked. Continued illumination when the transmission has been unlocked may indicate transmission wind-up. Reversing then moving forward will usually rectify the problem. If illumination remains, seek qualified assistance as soon as possible.

### REAR FOG LAMP (AMBER)



Illuminates when the rear fog lamps are operating.

### HIGH BEAM (BLUE)



Illuminates when headlamps main beam is selected.

### DIRECTION INDICATORS (GREEN)



The appropriate lamp flashes while a direction indicator is in use. If it fails to flash or flashes very rapidly, one of the bulbs has failed.

### SIDE LAMPS (GREEN)



Illuminates when the side lamps are operating.

### SIDE LIGHTS (GREEN)



Illuminates when the side lamps are operating.

### TRAILER DIRECTION INDICATORS (GREEN)



Flashes when a trailer is attached and the direction indicators are in use. If there is no flash, a trailer bulb has failed.

### LOW FUEL WARNING (AMBER)



Located in the fuel gauge, this illuminates when remaining fuel drops to 9 litres (2 gallons). Refuel at the first opportunity.