


Audio system

AUDIO CONTROLS (STANDARD SYSTEM)

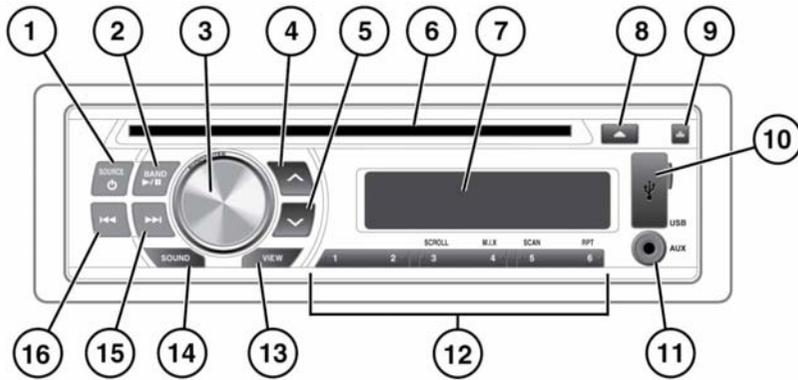

E147637

1. Power/source.
 - Short press - switch source between **TUNER, DISC, USB AUDIO** and **AUXILIARY**.
 - Long press - turn on/off the audio system.
2. Select band (Radio mode) or pause/play current audio source (CD/MP3 mode).
3. Volume control/menu select.
 - Rotate to adjust the volume. When a menu is open, rotate to select the various menu items.
 - Press to select a menu item.
4. Previous folder (MP3 mode). In radio mode, press and hold to turn on traffic announcements.
5. Next folder/TA.
6. CD loading slot.
7. Audio information display.
8. CD eject.
9. Release button. Release and remove the audio system face plate for security or to access the system reset button.
10. USB connection.
11. Auxiliary audio input.
12. Preset buttons.
13. Change the displayed information.
14. Audio settings/system setup.
 - Short press - adjust the audio settings:
 - Bass.
 - Treble.
 - Balance.
 - Fader.
 - Long press - access the setup menu:
 - AF (Alternative frequencies).
 - RDS (Radio Data System) regional.
 - PI seek.
15. Seek up.
 - Short press:
 - to auto seek up the frequency to the next radio station.
 - to select the next track on the chosen audio source - CD, MP3 etc.
 - Long press:
 - to seek continuously up through the radio frequencies.