


PORTABLE MEDIA CONTROLS (STANDARD SYSTEM)

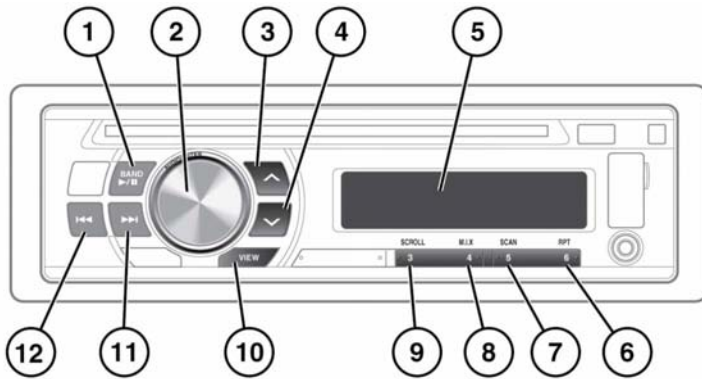

E147587

1. Pause/play.
 2. Volume control/menus select:
 - Rotate to adjust the volume. When a menu is open, rotate to select the various menu items.
 - When a menu is open, rotate to switch between menu items and press to confirm a selection.
 3. Previous folder (MP3 mode).
 4. Next folder (MP3 mode).
 5. Information display screen.
 6. Repeat.
 - Short press - continuously play the current track.
 - Long press - continuously play the tracks in the current folder (MP3 mode).
- Note:** By default, the current folder/CD will be played continuously.
7. Scan.
 - Short press - play the first 10 seconds of every track on the disc.
 - Long press - play the first 10 seconds of the first track in each folder (MP3 mode).
 8. Shuffle.
 - Short press - play each track on the disc in a random sequence (CD mode).
 - Long press - play each track in the selected folder in a random sequence (MP3 mode).
 9. Scroll through longer track names etc on the display screen.
 10. Change the displayed information.
 11. Seek up.
 - Short press - play the next track on the chosen audio source.
 - Long press - scan forward through the current track.
 12. Seek down.
 - Short press - select the previous track on the chosen audio source.
 - Long press - scan back through the current track.