

## LICENSE PLATE LAMP BULB REPLACEMENT

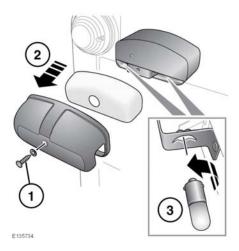

- 1. Remove the retaining screw.
- 2. Remove the cover.
- **3.** Press a bulb into the unit, then turn it and remove.

## SIDE REPEATER LAMP BULB REPLACEMENT

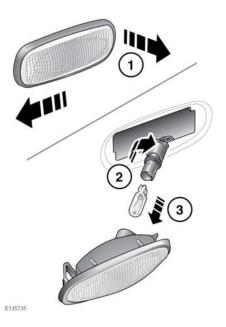

- 1. Slide the lens forward, lift the rear edge then remove the unit.
- 2. Rotate the bulb holder and remove from the lamp unit.
- 3. Pull the bulb out of the holder.

When refitting, ensure that the tab on the lamp unit is inserted into the aperture first, before pushing into position in the wing.