


PORTABLE MEDIA CONTROLS

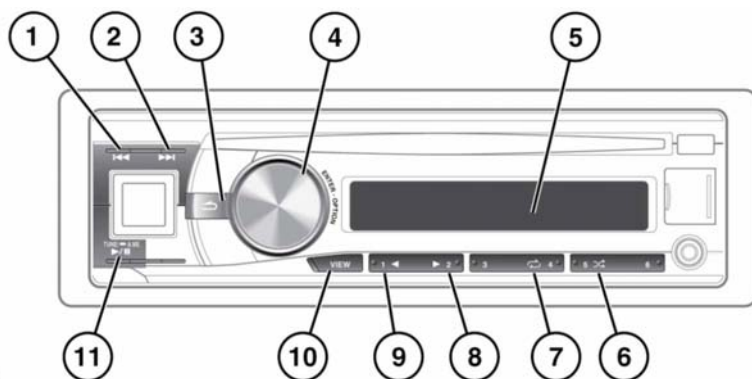

E145976

1. Seek down.
 - Short press - select the previous track on the chosen audio source.
 - Long press - scan back through the current track.
2. Seek up.
 - Short press - play the next track on the chosen audio source.
 - Long press - scan forward through the current track.
3. Back.
 - Short press - return to the previous menu.
 - Long press - close the menu.
4. Volume control/search/menu select:
 - Rotate to adjust the volume. When a menu is open, rotate to select the various menu items.
 - Press during MP3 playback to search by folder name or by file name. See **58, MEDIA SEARCH**.
 - When a menu is open, rotate to switch between menu items and press to confirm a selection.
5. Information display screen.
6. Shuffle. Press repeatedly to select from one of the following options.
 - Shuffle - the tracks are played in a random sequence (CD mode).
 - Shuffle folder - the tracks from the current folder are played in a random sequence (MP3 mode).
 - Shuffle all - all tracks from the current audio source are played in a random sequence (MP3 mode).
7. Repeat. Press repeatedly to select from one of the following options:
 - Repeat track - plays the current track continuously.
 - Repeat folder - the tracks from the current folder are played continuously (MP3 mode).

Note: By default, the current folder/CD will be played continuously.
8. Next folder (MP3 mode).
9. Previous folder (MP3 mode).
10. Change the displayed information.
11. Pause/play.